LLOYD ELECTRIC & ENGINEERING LIMITED
159, Okhla Industrial Estate Phase-III, New Delhi - 110020
Correspondence Address
Plot-2, Industrial Area, Kalkaji, New Delhi - 110019
Email: perfectservice@lloydmail.com

Customer Care Toll Free No.

Gujarat, Madhya Pradesh:1800-2582-583 | Punjab,Haryana,Himachal Pradesh, J&K: 1800-1377-781
Maharashtra,Chattisgarh,Goa:1800-1024-212 | South India:1800-1200-666 | Rest of India:1800-1020-666

LED TV

QUICK SETUP GUIDE

L40ND

Part No: ES-M142254

English

Dear Customer

Congratulations on being the proud owner of Lloyd LED TV
Your LED TV comes with Lloyd Guarantee of Quality.

Lloyd takes great pride in providing its customers with perfect products that adheres to international quality standards.

Lloyd is committed to international quality standards.

Lloyd is committed to provide the ultimate customer satisfaction as nothing brings us greater joy than having satisfied customers of Lloyd.

At Lloyd, feedback and suggestions based on your product usage experience are greatly appreciated.

Please feel free to contact us at
perfectservice@lloydmail.com

NIPUN SINGHAL
DIRECTOR

Accessories List

User Manual × 1　　Quick Setup Guide × 1　　Remote Control × 1　　Battery × 2
Screws(M4 × 30) × 4

Installing the Stand

NOTES

- The TV screen is very fragile,and must be protected at all times when removing the base stand.Be sure that no hard or sharp object,or anything that could scratch or damage the screen,come into contact with it.DO NOT exert pressure on the front of the TV at any time because the screen could crack.
- For tabletop use,the TV must be attached to the provided stand as shown on this page.

WARNING

Be sure to disconnect the AC power cord before installing a stand or wall-mount brackets.

CAUTION

Carefully place your TV facedown on a soft,cushioned surface to prevent damage to the TV or scratching to the screen.

Product image is only for reference,actual product may vary in appearance:

1. Attach the stand to the TV set as shown in the picture.
2. Use the screws (M4 × 30) × 4 to fix the stand tightly.

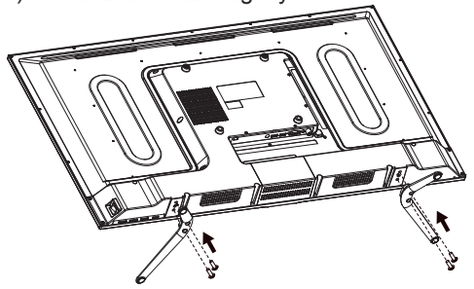

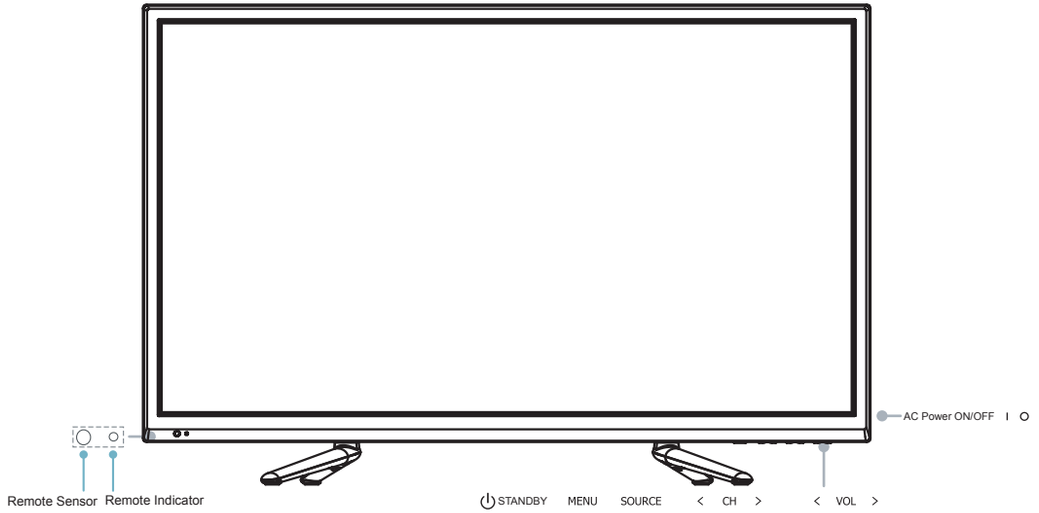

item	Description
Remote Sensor	Receive remote signals from the remote control. Do not put anything near the sensor, as its function may be affected.
Remote Indicator	Red light up in standby mode. Blue light up in power on mode
MENU	Open the OSD menu
SOURCE	Select among the different signal sources.
< CH >	Select the channel
< VOL >	Adjust the volume.
STANDBY ⏻	Turn on the TV or put the TV in standby mode.

NOTES

- Powering up or down the TV requires several seconds of processing time.Do not rapidly turn the TV on/off as abnormal operation may occur.

TV Rear

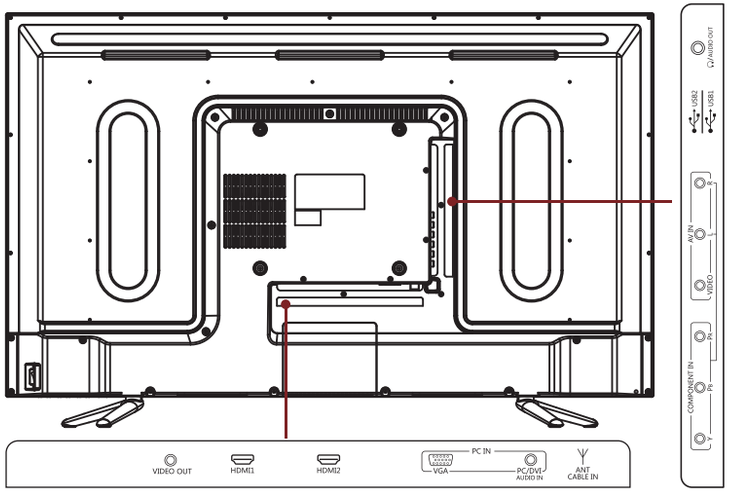

item	Description
ANT CABLE	Connect an antenna or cable TV to this jack.
HDMI	HDMI (High-Definition Multimedia Interface)provides uncompressed video data and digital audio data.Support: 480i\480p\576i\576p\720p\1080i\1080p
COMP	Connect to a DVD player, Digital Set-Top-Box, or other A/V devices with component (YPBPR) video and audio output jacks. Component audio Jack share AV IN audio Jack.Support: 480i\480p\576i\576p\720p\1080i\1080p
AV IN	Connect to the composite video and audio (L/R) output jacks on external video devices.
VGA / PC AUDIO IN	Connect to a PC or other devices with a VGA interface.
HEADPHONE	Connect to headphone for private listening.
USB	Video , MP3, Jpeg play.
VIDEO OUT	Connect a composite video cable from external equipment for monitoring or recording video.

NOTE

- FOR ILLUSTRATION ONLY.

Remote Control

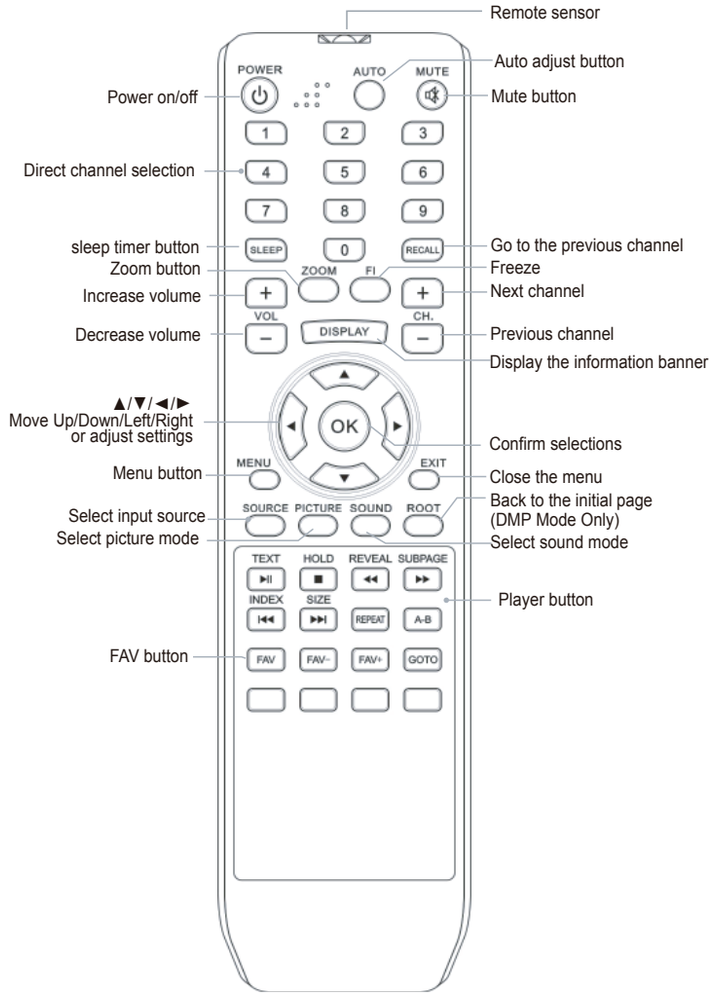

Change the batteries

1. Slide the back cover to open the battery compartment of the remote control.
2. Insert two AAA size batteries. Be sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.
3. Close the battery compartment cover.

❶ Gently lift up



❷ Insert the batteries



❸ Gently push down



☑ NOTES

1. Dispose of your batteries in a designated disposal area. Do not throw the batteries into fire.
2. Do not mix battery types or combine used batteries with new ones.
3. Remove depleted batteries immediately to prevent battery acid from leaking into the battery compartment.
4. If you do not intend to use the remote control for a long time, remove the batteries.
5. Batteries should not be exposed to excessive heat, such as sunshine, heat registers, or fire.
6. Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin, wash immediately.

Disposal of this unit

Product should not be damaged, dismantled or thrown in municipal waste. It should be packed and handed over to authorised re-cycler."

Dimension	**With Stand**	Width: 931.3 mm Height: 595.2 mm Depth: 240 mm
	Without Stand	Width: 931.3 mm Height: 551.9 mm Depth: 72 mm
Weight	**NET**	7.7 kg
	GROSS	11 kg
Active Screen Size (Diagonal)		40 inches
Screen resolution		1920 × 1080
Audio power		8 W + 8 W
Power consumption		75 W
Power supply		100-240 V ~ 50 / 60 Hz
USB supply		DC 5V, Max 500 mA
Receiving systems	**RF**	PAL I B/G D/K, SECAM B/G D/K
	AV	PAL,NTSC
Environmental conditions		Temperature: 5°C~ 45°C Humidity: 20%-80% RH Atmospheric pressure: 86 kPa - 106kPa

Made in China

Attention: Excessive sound pressure from earphones and headphones can cause hearing loss.

☑ NOTE

Features, appearance and specifications are subject to change without notice.